


COMPONENTS

ILLUSTRATION


NO. 1 ROOM LIGHT ASSEMBLY

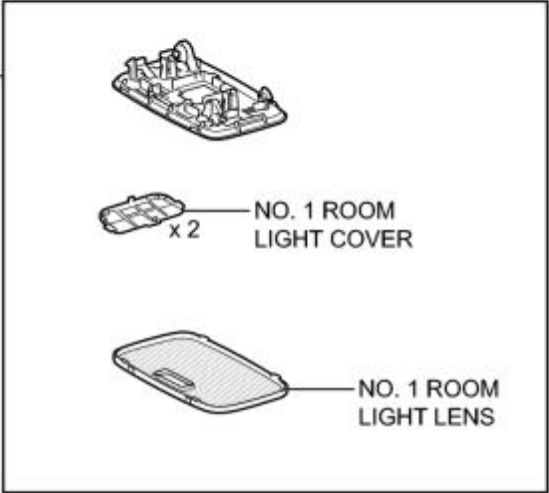

P

REMOVAL


1. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

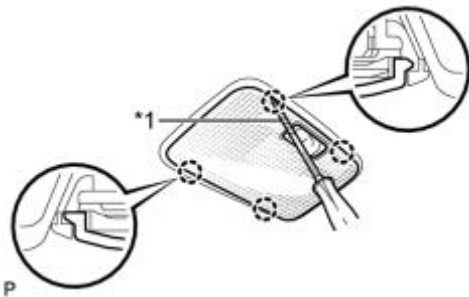

(a) Using a screwdriver wrapped with protective tape, disengage the 4 claws and remove the No. 1 room light lens.

Text in Illustration


*1	Protective Tape
----	-----------------

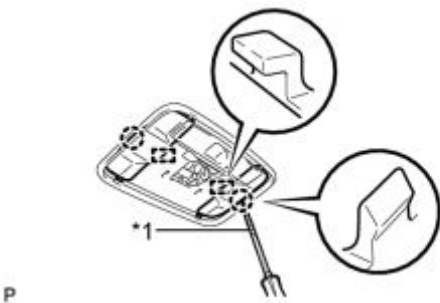

(b) Using a screwdriver wrapped with protective tape, disengage the 2 claws and 2 guides, and remove the 2 No. 1 room light covers.

Text in Illustration


*1	Protective Tape
----	-----------------

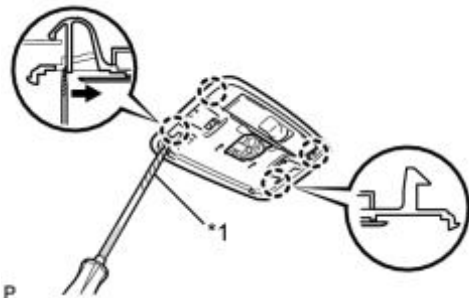

(c) Using a screwdriver wrapped with protective tape, disengage the 4 claws and disconnect the No. 1 room light assembly as shown in the illustration.

Text in Illustration


*1	Protective Tape
----	-----------------

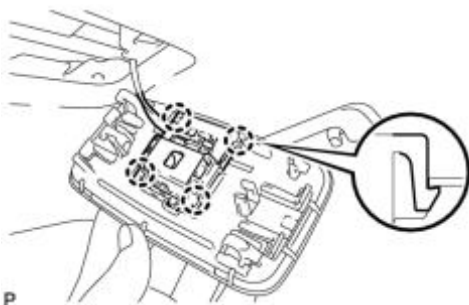

(d) Using a screwdriver, disengage the 4 claws and disconnect the room light switch base from the No. 1 room light assembly.

INSTALLATION


1. INSTALL NO. 1 ROOM LIGHT ASSEMBLY

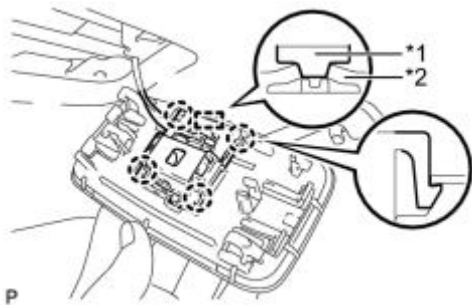

(a) Align the switch parts shown in the illustration and engage the 4 claws to install the room light switch base to the No. 1 room light assembly.

Text in Illustration


*1	Switch Part of Room Light Switch Base
*2	Switch Part of No. 1 Room Light Assembly

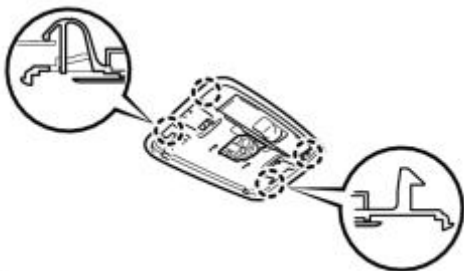

(b) Engage the 4 claws and install the No. 1 room light assembly.



(c) Engage the 2 claws and 2 guides to install the 2 No. 1 room light covers.

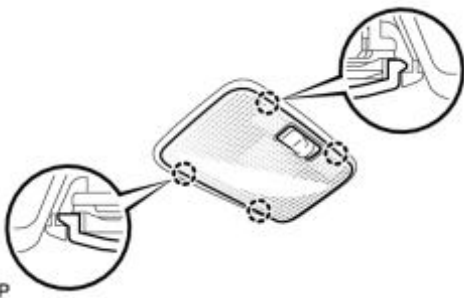

(d) Engage the 4 claws to install the No. 1 room light lens.